


User Guide and Assembly Instructions

ZONE CLASSIC

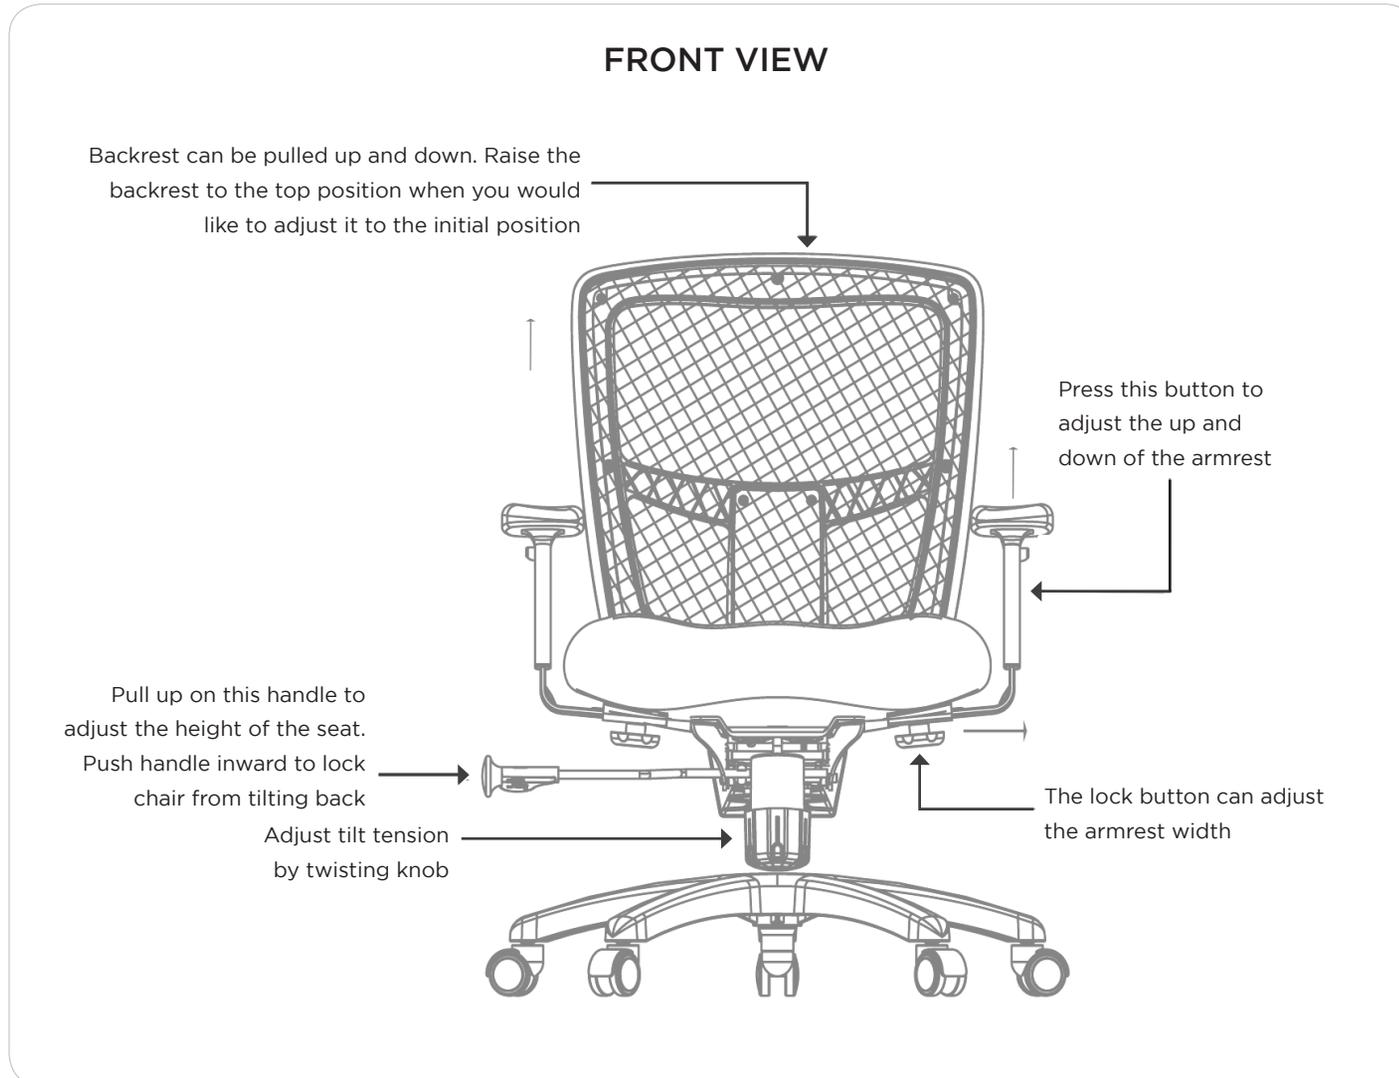

Parts and Hardware


Attention: Carefully check all parts according to the instructions before assembling. Please assemble carefully to avoid scratching surfaces, especially powder coated surfaces.

Item	Parts	Qty.
A 	Back Assembly	1
B 	Seat Assembly	1
C 	Mechanism	1
D 	Armrest L/R	1
E 	Gas Lift	1
F 	Base	1
G 	Caster	5
H 	Adjusted Width Button	2

Item	Parts	Qty.
I 	Inner Hexagon Screw 5/16" x 3/4"	3
J 	Flat-head Inner Hexagon Screw 1/4" x 7/8"	4
K 	Flat Pad 16 x 8.3 x 2.0mm	7
L 	Wrench M5 - 25 x 64	1
M 	Dust Cover	1


1. Assembling the Caster & Base

Insert five casters [G] into the base [F]. Push hard until you feel or heard the caster snap into place.

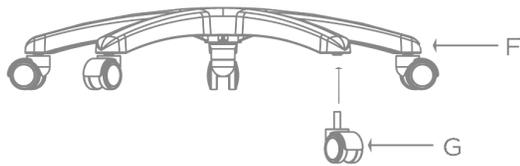


2. Assembling the Base, Gas Lift & Dust Cover

Insert the gas lift [E] into the base [F], then put the dust cover [M] on the gas lift.

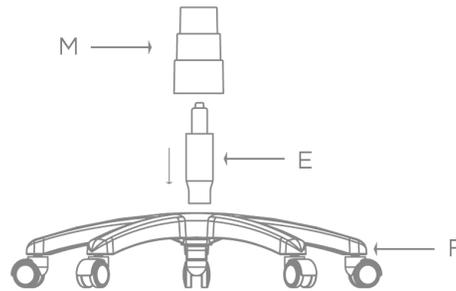


3. Assembling the Seat Assembly & Mechanism

Keep the seat assembly [B] on a table plane first. Then insert the mechanism [C] into the seat assembly. Be sure all four holes are in the right place, then fix the flat-head inner hexagon screw [J] and flat pad [K] into the seat assembly by wrench [L].

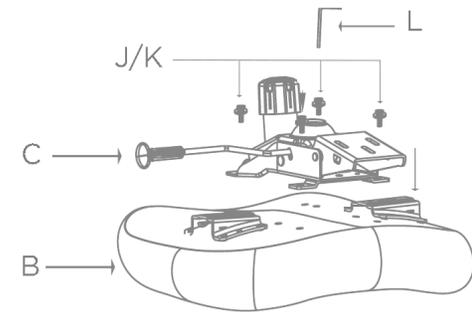


4. Assembling the Seat & Back

Keep the seat assembly [B] on a table plane first, then insert the back assembly [A] into the seat assembly. Be sure all three holes are in the right place, then fix the seat assembly with inner hexagon screw [I] and flat pad [K] by wrench [L].

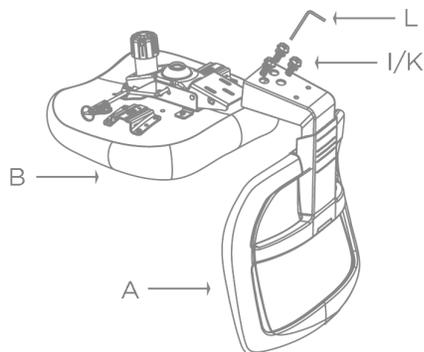


5. Assembling the Armrest & Seat

Insert the lower part of the armrest [D] into the seat assembly [B] then lock it with the adjusted width button [H].

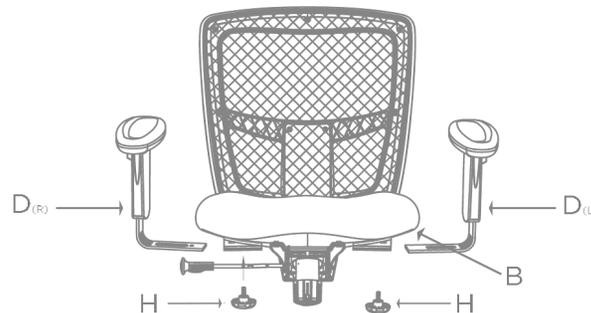

5. Assembling the Seat & Gas Lift

Insert the seat assembly [B] into the gas lift [E].

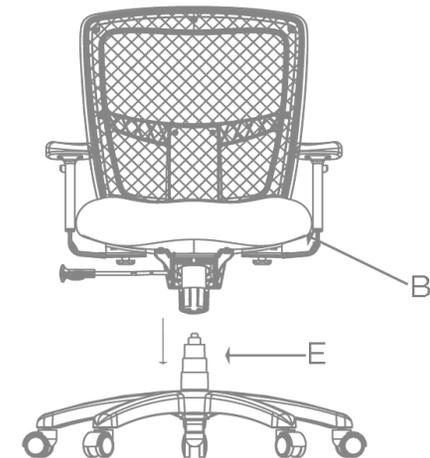

Product Dimensions

