



Universal Modesty Panel Installation Instructions


Universal Modesty Panel Installation (excluding Verity)

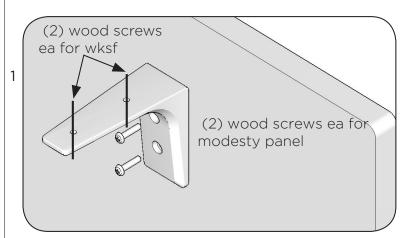


Attach Brackets to Modesty Panel with the screws provided.

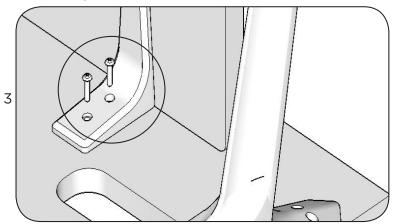

Install modesty panel on the bottom of the worksurface

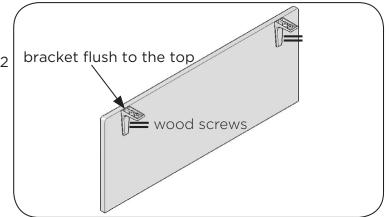

Bracket should be flush to the top of the modesty panel

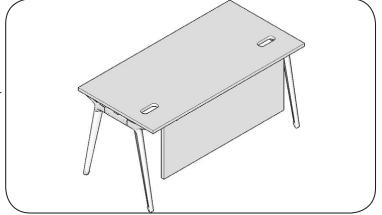


The Modesty Panel installs under the worksurface and is shorter than the width of the top.




Universal Modesty Panel Verity Installation Instructions


Verity Modesty Panel Installation

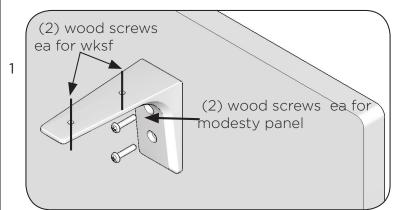


Install brackets to Modesty Panel at the pre-drilled holes with the screws provided. The screws go through the bracket into the modesty

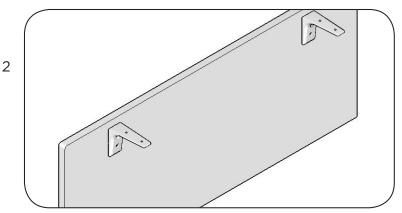

Brackets should be just 1" from the top of the modesty

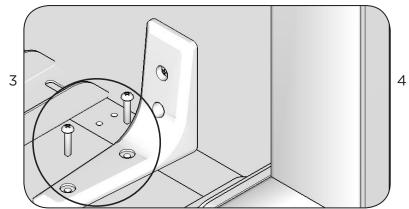

Install Modesty Panel on the bottom of the worksurface

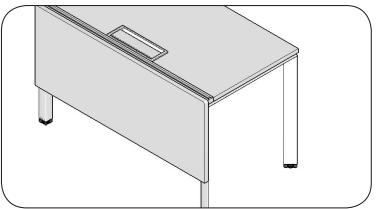

The Modesty Panel matches the width of the table and the top of the Modesty is aligned with the top of the track.