FRÍANT
ReddiSpace
QuickTime
Installation Manual

01 ReddiSpace QuickTime FFLEX-S Installation
Please confirm that you have the following components:
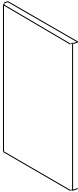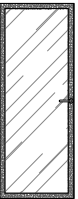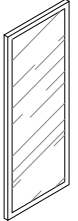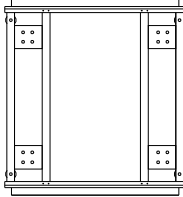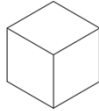
Image	Name	Pieces
	Left panel	1
	Right panel	1
	Door	1
	Rear glass module	1

Image	Name	Pieces
	Ceiling Pieces	2
	Bottom frame	1
	Blocks	4

02

ReddiSpace QuickTime FFLEX-S Installation
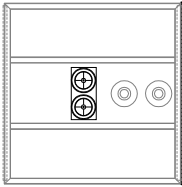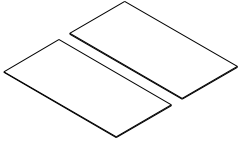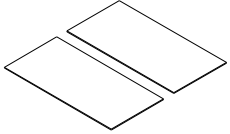Please confirm that you have the following components:
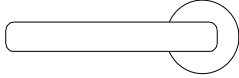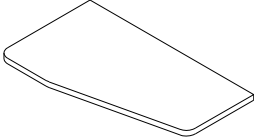
Image	Name	Pieces
	Floor Pieces	2
	Carpet Pieces	4
	Top Frame	1
	Glass Trim Pieces	2

Image	Name	Pieces
	Lock and Handle	1
	Power Cord	1
	Hexagon socket wrench	3
	Worktop	1

03 ReddiSpace QuickTime FFLEX-S Installation
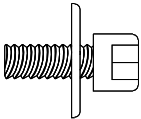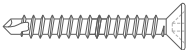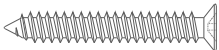Please confirm that you have the following components:
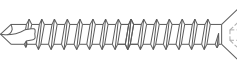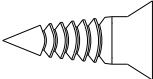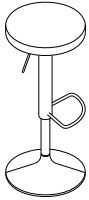
Image	Name	Pieces
	A-06 Hexagon Socket Screw	20
	A-25 25mm Self Drilling Screw	30
	A-40 40mm Self Drilling Screw	12

Image	Name	Pieces
	A-60 60mm Self Drilling Screw	6
	B-63 60mm Self Drilling Screw	4
	A-10 10mm Self Drilling Screw	5

04

ReddiSpace QuickTime FFLEX-S Installation
Please confirm that you have the following components:

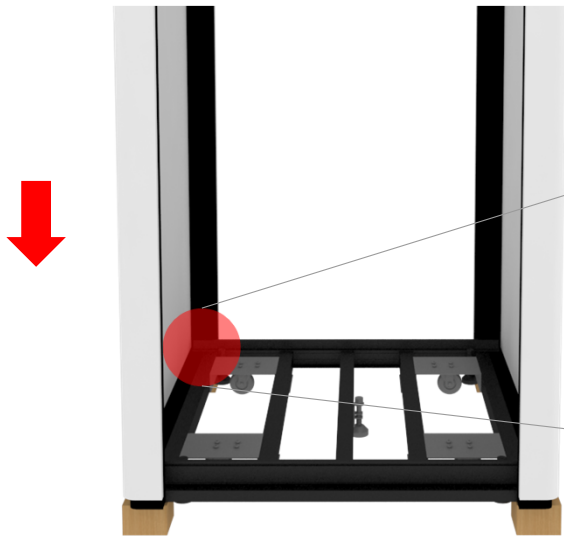| Image	Name	Pieces
	Stool Optional, sold separately	1

05 Step 1: Install platform
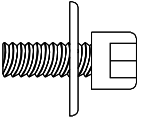
Put blocks under
the bottom frame
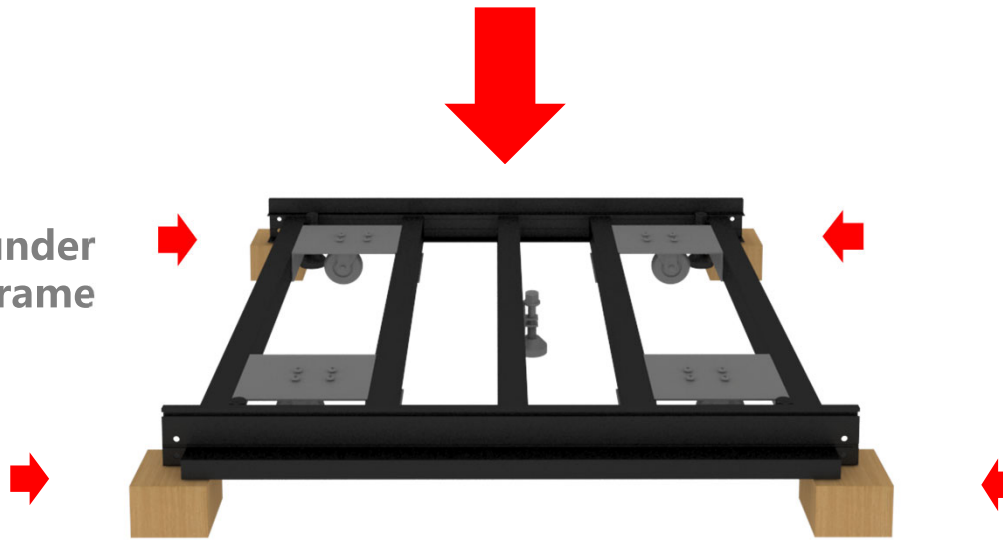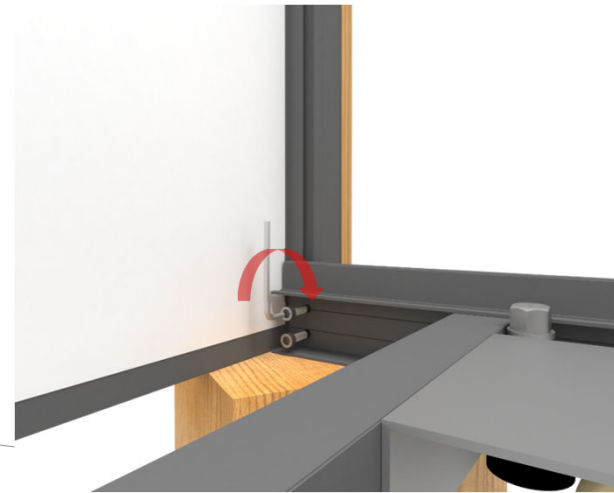
06

Step 2: Install steel side panels

Insert the side panels vertically into the sides of the bottom frames
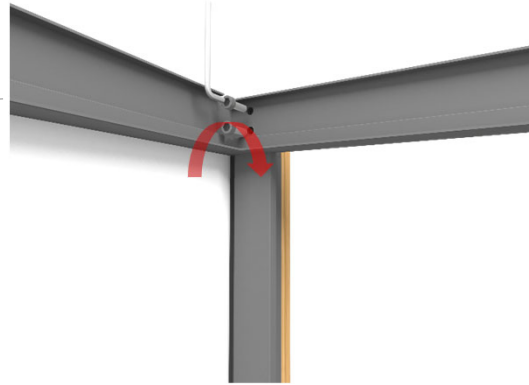
● Hexagon socket wrench

A-06
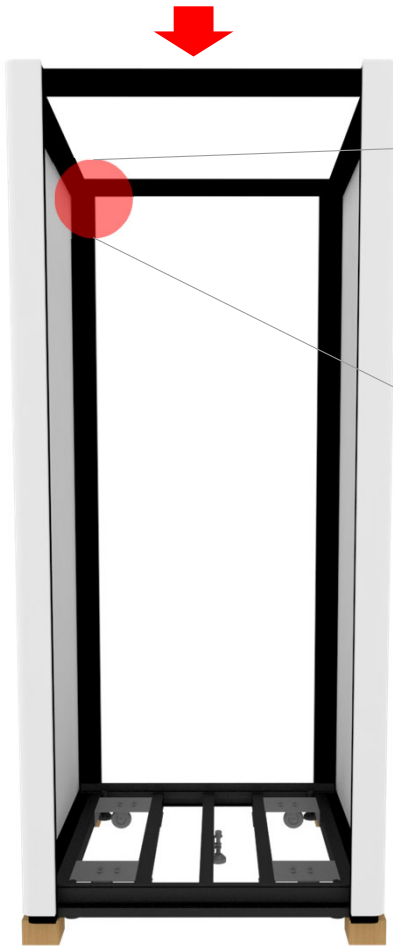● Hexagon socket screw

Secure side panels using A-06 hexagon screws

06

Step 3: Install top frame

Hexagon socket wrench

A-06
Hexagon socket screw

Attach the top frames on front and back side of ceiling with A-06 hexagon screws.
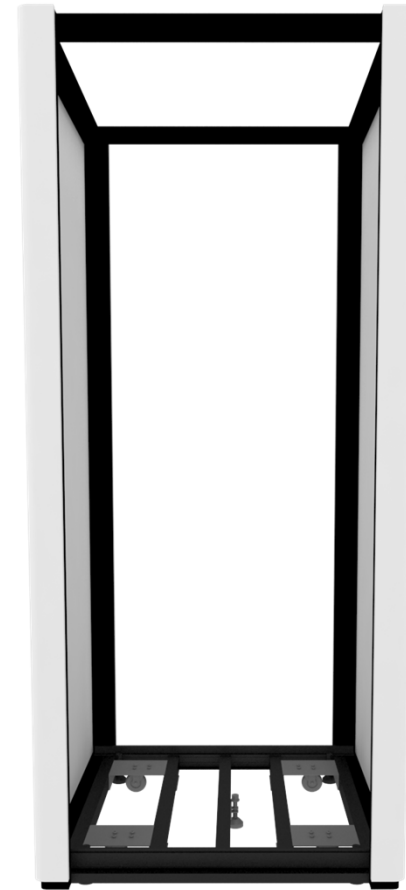
07

Step 4: Remove blocks
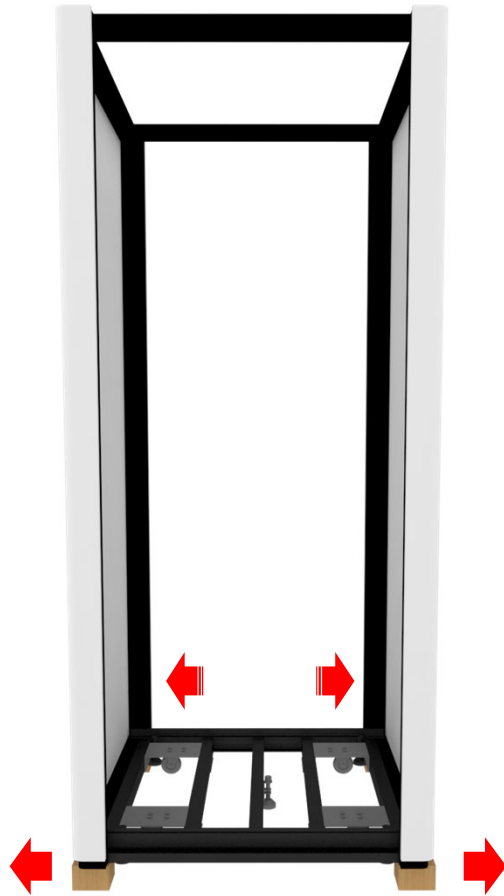
4.1 Move the casters to each side and press against bottom frame
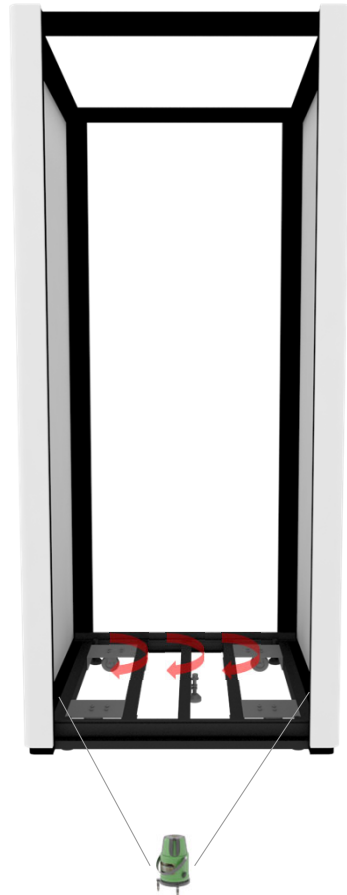
4.2 remove the blocks carefully

08

Step 5：Adjust level
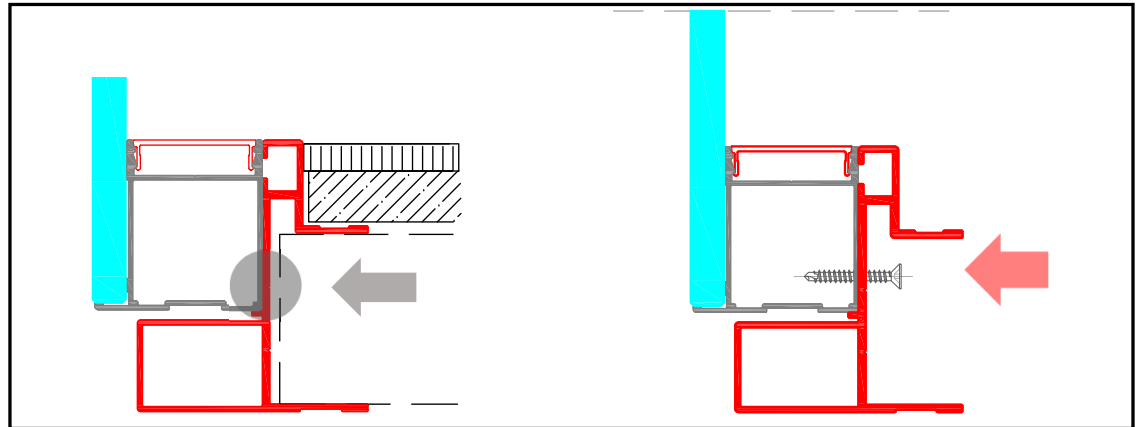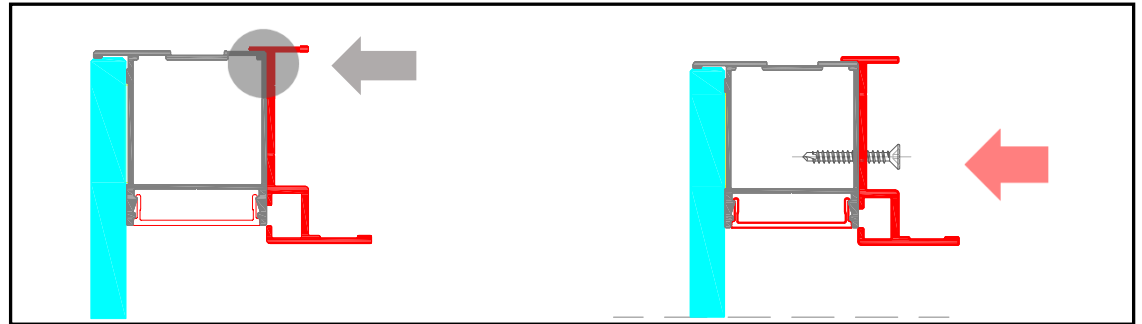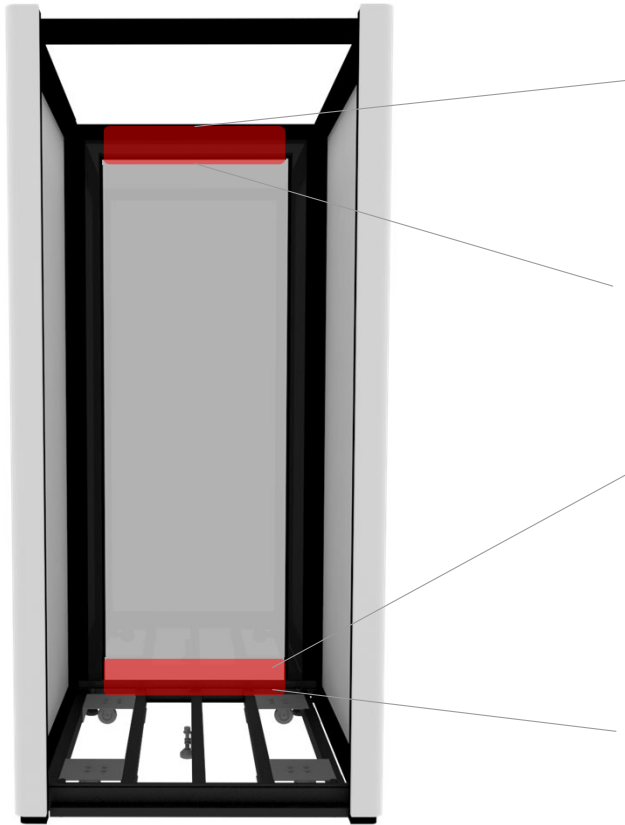
Using a laser level, adjust the legs to level the pod

laser level

09

Step 6： Install the glass

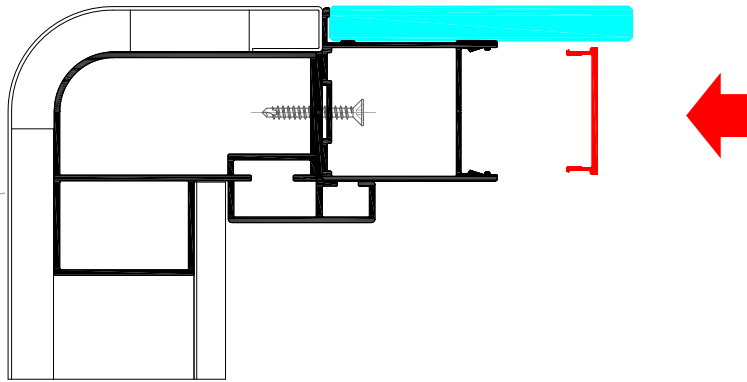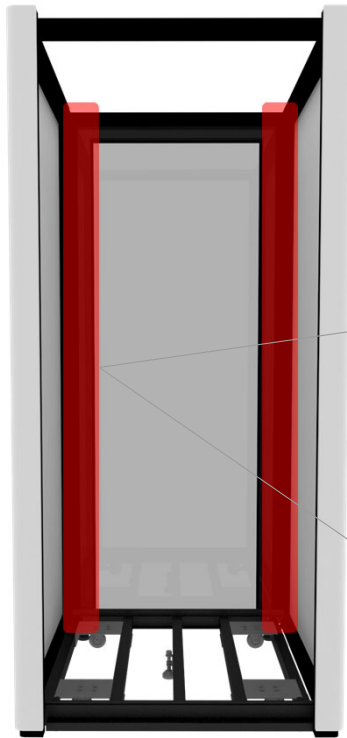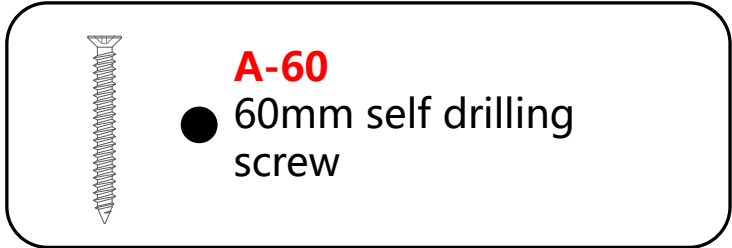A-25
25mm self drilling screw

6.1 Place the glass module flat against the upper and lower slots.

6.2 Attach the glass panel at the top and bottom using 25mm self drilling screws

10

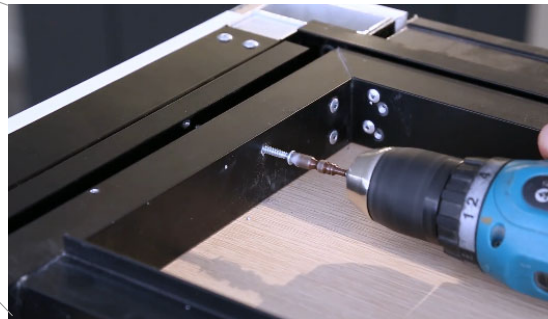Step 7： Install the glass

A-60
60mm self drilling screw

6.3 Attach the sides of the glass panel using 60mm self drilling screws

6.4 Install the glass cover trim on top and bottom, then on sides

11

Step 8： Install the Top

B-63
● 60mm self drilling screw

Place the ceiling module flat against the top of frame and secure using 60mm self drilling screws
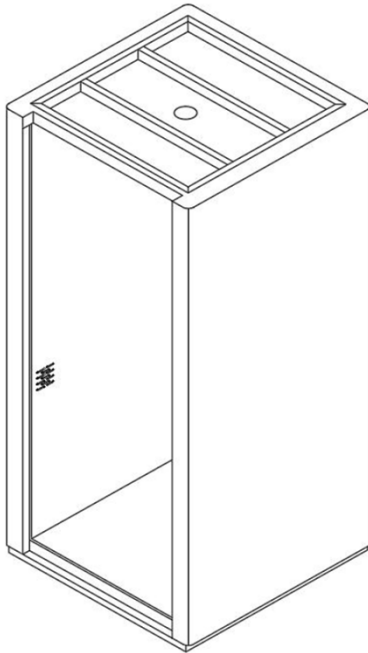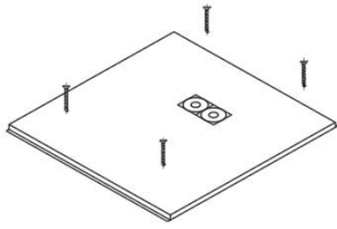
12

Step 9: Connect the electrical

Connect the electrical cords for the light and fan

13

Step 10:   Install roof
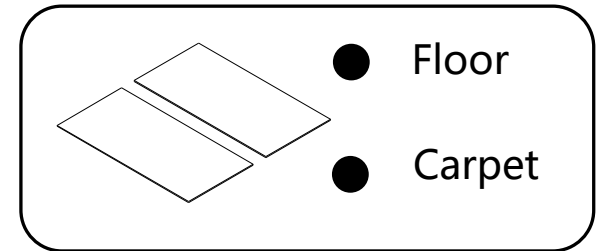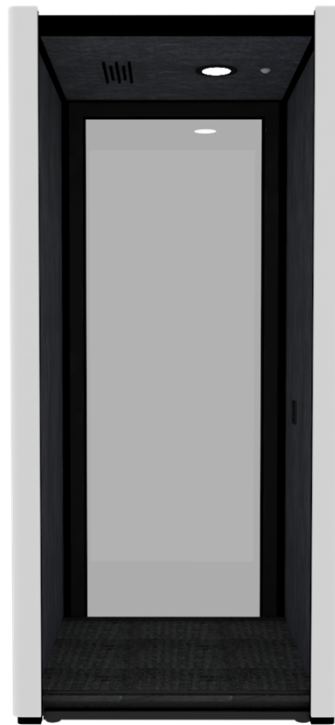

A-25
25mm self drilling screw

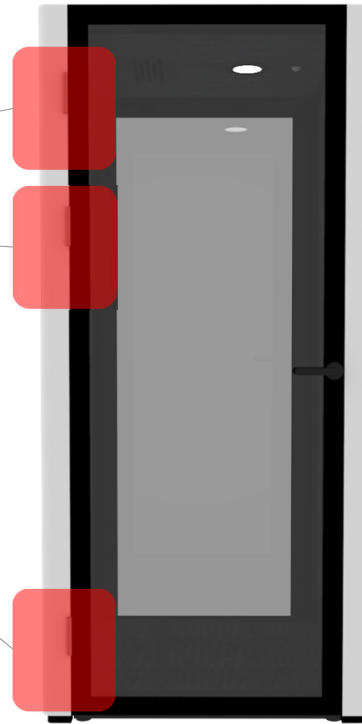**Place the roof module flat against the top of frame and secure using 25mm self drilling screws**

14

Step 11: Install the floor

Floor

Carpet

Install the floor (no screws needed) and lay the carpet on top
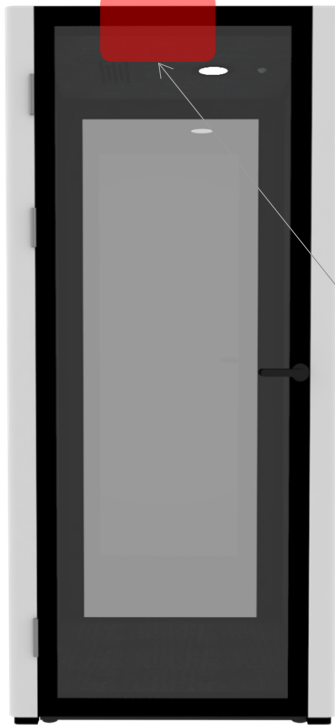
Step 12:   Install Hinges

A-40
● 40mm self drilling screw

16

Step 13: Install door closer

10.1 Loosen the screw for the door closer on top of the door

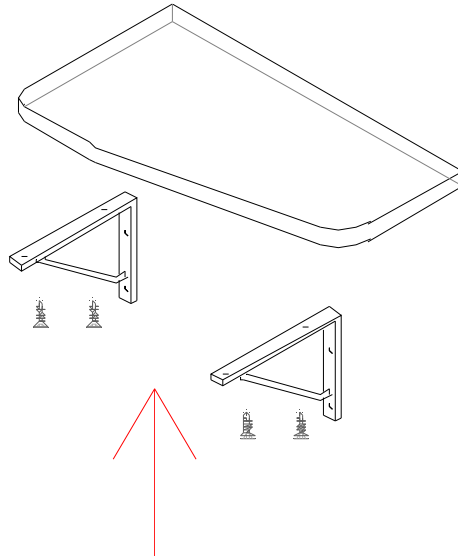10.2 Push the hole on the top of the door to align with the door closer


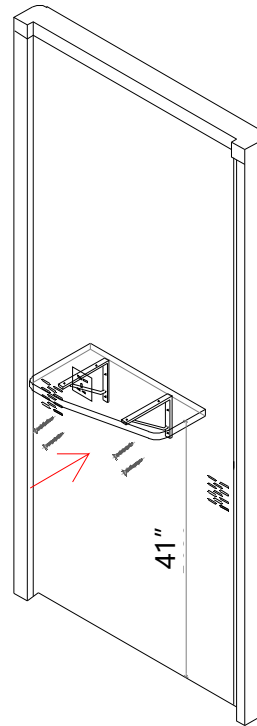10.3 Tighten the screw

Hexagon socket wrench

17

Step 14: Install desktop

11.1 Attach the brackets to the bottom of the worktop using 10mm self drilling screws

41"

11.2 Attach worktop to the side panel at 41" high using 25mm self drilling screws

A-10
10mm self drilling screw

A-25
25mm self drilling screw